


EAN: 4057304014567
static.hansa.com/03402473

Ersatzteile

SP03402473

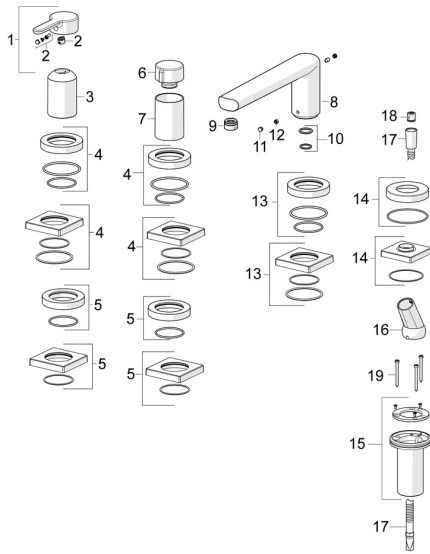

	Name	Art.-Nr.
01	Hebel Chrom	1004279V
02	Dekorkappe	59914573
03	Abdeckhülse Chrom	59914572
04	Abdeckplatte, d 72 mm, for Compact Chrom	59914667
04	Rosette, 75x75 mm Chrom	59914213
05	Rosette, 75x75 mm Chrom	59914214
05	Abdeckplatte, d 72 mm Chrom	59914668
06	Mengen-Einstell-Griff Chrom	59914669
07	Abdeckhülse Chrom	59914671
08	Auslauf, L=240	59912829
09	Luftsprudler, M24x1 D Chrom	59911829
10	O-Ring, d 18x2	59913291
11	Abdeckstopfen Chrom	59911840
12	Schraube, M6x9.5	59901609
13	Rosette, 75x75 mm Chrom	59914209
13	Rosette Chrom	59913450
14	Rosette, 75x75 mm Chrom	1003885V
14	Deckplatte, d 72 mm Chrom	59914672
15	Schlauchdurchführung	59914673
16	Halter Chrom	59912282
17	Brauseschlauch, L=1750, G1/2-M12x1 Chrom	59912281
18	Rückschlagventil	59905714
19	Schraube, M4x45	59912291