


EAN: 4057304014529
static.hansa.com/06442473

Ersatzteile

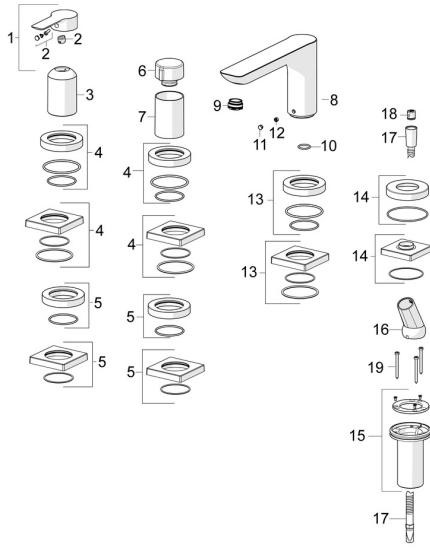

SP06442473

	Name	Art.-Nr.
01	Hebel Chrom	1004277V
02	Dekorkappe	59914573
03	Abdeckhülse Chrom	59914572
04	Abdeckplatte, d 72 mm, for Compact Chrom	59914667
04	Rosette, 75x75 mm Chrom	59914213
05	Rosette, 75x75 mm Chrom	59914214
05	Abdeckplatte, d 72 mm Chrom	59914668
06	Mengen-Einstell-Griff Chrom	59914669
07	Abdeckhülse Chrom	59914671
08	Auslauf, L=180	59913736
09	Luftsprudler, M24x1 D, CC	59913720
10	O-Ring, d 18x2	59913291
11	Abdeckstopfen Chrom	59911840
12	Schraube, M6x9.5	59901609
13	Rosette, 75x75 mm Chrom Ausgelaufen	59914211
13	Abdeckplatte, d 72 mm Chrom Ausgelaufen	59913278
14	Deckplatte, d 72 mm Chrom	59914672
14	Rosette, 75x75 mm Chrom	1003885V
15	Schlauchdurchführung	59914673
16	Halter Chrom	59912282
17	Brauseschlauch, L=1750, G1/2-M12x1 Chrom	59912281
18	Rückschlagventil	59905714
19	Schraube, M4x45	59912291