


## Ersatzteile

### SP51860173

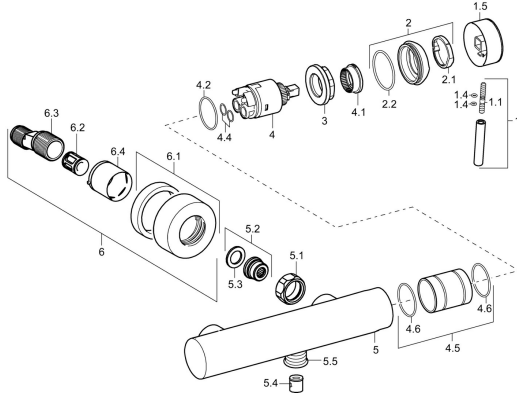

	Name	Art.-Nr.
1	Hebel, L=50, M5 IG	59913335
1.1	Schraube, M5x35	59913299
1.4	O-Ring, d 3x1.5	59913100
1.5	Abdeckkappe Chrom	59913332
1.5	Abdeckkappe Weiss <span style="background-color: #cccccc;">Ausgelaufen</span>	59913334
1.5	Abdeckkappe Schwarz <span style="background-color: #cccccc;">Ausgelaufen</span>	59913333
2	Abdeckkappe Chrom	59913364
2.1	Gleitring	59913363
2.2	O-Ring, d 38x2	59913212
3	Schraube, M42x1, SW34	59913365
4	Kartusche, 3.5 Eco	59912324
4	Kartusche, 3.5 Classic	59913075
4.1	Temperatur-Anschlagring	59912325
4.2	O-Ring, d 28.24x2.62 <span style="background-color: #cccccc;">Ausgelaufen</span>	59912590
4.4	O-Ring, d 10.10x1.60 <span style="background-color: #cccccc;">Ausgelaufen</span>	59905072
4.5	Collar <span style="background-color: #cccccc;">Ausgelaufen</span>	59913433
5.1	Anschlussmutter, G3/4, AF30	59902230
5.2	Sitz, G1/2, L, WAF10	59904618
5.3	Haltering, 23.9x15.2x2	59902689
5.4	Rückschlagventil	59905714
5.5	Gewindenippel, G1/2xM18x1	59911384
6.1	Rosette Chrom	59913432
6.2	Schalldämpfer	59904792
6.3	Exzenter-Anschluss, G3/4xG1/2, DN15	59910254
6.4	Abdeckhülse Chrom	59912651
N.I.	Schlüssel, SW30/34	59912108