


EAN: 4015474205093  
[static.hansa.com/57131101](http://static.hansa.com/57131101)

## Ersatzteile

### SP57131101

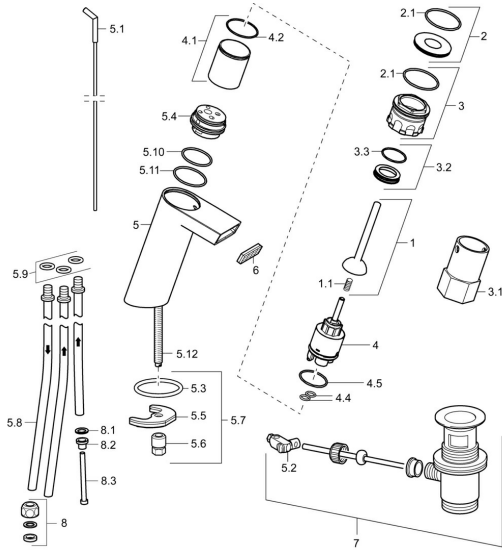

	Name	Art.-Nr.
1	Hebel Chrom	59913090
1	Federclip	59913091
2	Zierring	59913088
2.1	O-Ring, d 40x2	59911507
3	Befestigungsschraube, M44x1 AF34	59913089
3.1	Steckschlüssel, SW34	59913092
3.2	Distanzring	59913096
4	Kartusche, 3.5 Joystick	59913051
4.1	Distanzhülse	59913093
4.4	O-Ring, d 10.10x1.60 <span style="background-color: black; color: white; padding: 2px;">Ausgelaufen</span>	59905072
4.5	O-Ring, d 28.24x2.62 <span style="background-color: black; color: white; padding: 2px;">Ausgelaufen</span>	59912590
5.1	Zugstange mit Knopf Chrom	59912527
5.2	Gelenkstück	59904624
5.3	O-Ring, d 36.09x d 3.53	59913396
5.5	Befestigungsplatte	59904765
5.6	Schraube, M8x1, SW13	59904766
5.7	Befestigungssatz	59910749
5.8	Rohr, M8x1, L=560	59912806
5.9	O-Ring, 6x1.4	59913266
5.10	O-Ring, d 32x2	59912803
5.12	Befestigungsschraube, M8x1, L=140	59912474
6	Luftsprudler und Schlüssel, 6 l/min	59913094
7	Ablaufgarnitur Chrom	59904620
8	Überwurfmutter	59904969
8.1	Dichtungskit, 14.9x8.5x1	59902352
8.2	Dichtungskit, 10x8	59902272
8.3	Schlauch	59902151