


EAN: 4015474263369
static.hansa.com/57710173

Ersatzteile

SP57710173

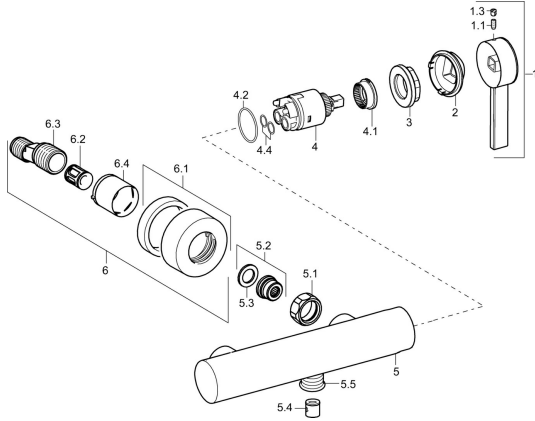

	Name	Art.-Nr.
1	Hebel Chrom Ausgelaufen	59914018
1.1	Schraube, M5x6, SW2.5	59912617
1.3	Blindstopfen Chrom	59913762
2	Abdeckkappe Chrom	59914016
3	Schraube, M4x1, SW34	59913365
4	Kartusche, 3.5 Eco	59912324
4	Kartusche, 3.5 Classic	59913075
4.1	Temperatur-Anschlagring	59912325
4.2	O-Ring, d 28.24x2.62 Ausgelaufen	59912590
4.4	O-Ring, d 10.10x1.60 Ausgelaufen	59905072
5.1	Anschlussmutter, G3/4, AF30	59902230
5.2	Verbinder	59913400
5.3	Haltering, 23.9x15.2x2	59902689
5.4	Rückschlagventil	59905714
5.5	Gewindenippel, G1/2xM18x1	59911384
6.1	Rosette Chrom	59913432
6.2	Schalldämpfer	59904792
6.3	Exzenter-Anschluss, G3/4xG1/2, DN15	59910254
6.4	Abdeckhülse Chrom	59912651
N.I.	Schlüssel, SW30/34	59912108