


EAN: 4057304014567
static.hansa.com/03402473

Ersatzteile

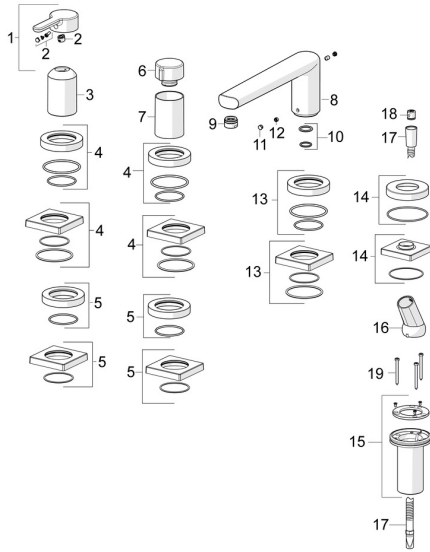

SP03402473

| | Name | Art.-Nr. |
|----|--|----------|
| 01 | Hebel Chrom | 1004279V |
| 02 | Dekorkappe | 59914573 |
| 03 | Abdeckhülse Chrom | 59914572 |
| 04 | Abdeckplatte, d 72 mm, for Compact Chrom | 59914667 |
| 04 | Rosette, 75x75 mm Chrom | 59914213 |
| 05 | Rosette, 75x75 mm Chrom | 59914214 |
| 05 | Abdeckplatte, d 72 mm Chrom | 59914668 |
| 06 | Mengen-Einstell-Griff Chrom | 59914669 |
| 07 | Abdeckhülse Chrom | 59914671 |
| 08 | Auslauf, L=240 | 59912829 |
| 09 | Luftsprudler, M24x1 D Chrom | 59911829 |
| 10 | O-Ring, d 18x2 | 59913291 |
| 11 | Abdeckstopfen Chrom | 59911840 |
| 12 | Schraube, M6x9.5 | 59901609 |
| 13 | Rosette, 75x75 mm Chrom | 59914209 |
| 13 | Rosette Chrom | 59913450 |
| 14 | Rosette, 75x75 mm Chrom | 1003885V |
| 14 | Deckplatte, d 72 mm Chrom | 59914672 |
| 15 | Schlauchdurchführung | 59914673 |
| 16 | Halter Chrom | 59912282 |
| 17 | Brauseschlauch, L=1750, G1/2-M12x1 Chrom | 59912281 |
| 18 | Rückschlagventil | 59905714 |
| 19 | Schraube, M4x45 | 59912291 |