


EAN: 4015474259850  
[static.hansa.com/09742183](http://static.hansa.com/09742183)

## Ersatzteile

### SP09742183

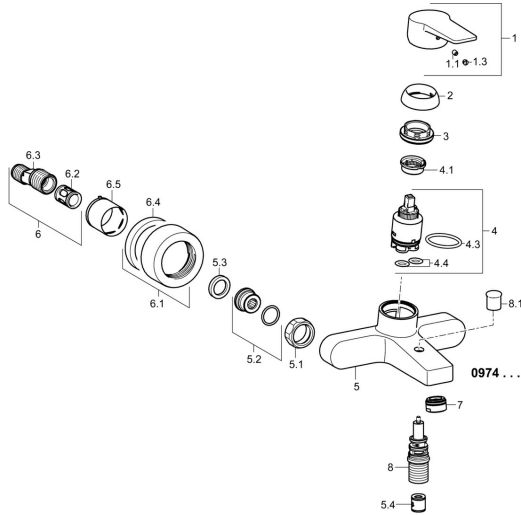

	Name	Art.-Nr.
1	Hebel Chrom	59913910
1	Hebel Chrom	59913911
1.1	Schraube, M5x8, SW2.5	59904755
1.3	Dekorkappe Grau	59912112
2	Abdeckkappe, 33x3 mm Chrom	59912504
3	Spann-Mutter, M40x1	1003409V
4	Kartusche, 3.5 Eco	59912324
4	Kartusche, 3.5 Classic	59913075
4.1	Temperatur-Anschlagring	59912325
4.3	O-Ring, d 28.24x2.62 <span style="background-color: black; color: white; padding: 2px;">Ausgelaufen</span>	59912590
4.4	O-Ring, d 10.10x1.60 <span style="background-color: black; color: white; padding: 2px;">Ausgelaufen</span>	59905072
5.1	Anschlussmutter, G3/4, AF30	59902230
5.2	Verbinder	59913400
5.3	Haltering, 23.9x15.2x2	59902689
5.4	Rückschlagventil	59905714
6.1	Rosette Chrom	59913432
6.2	Schalldämpfer	59904792
6.3	Exzenter-Anschluss, G3/4xG1/2, DN15	59910254
6.5	Abdeckhülse Chrom	59912651
7	Luftsprudler, M24x1 C Chrom	59913401
8	Umsteller, automatisch	59912706
8.1	Umstellknopf Chrom	59912801
N.I.	Schlüssel, SW30/34	59912108